

Etac Swift Mobil-2 @etac®


78691D 19-06-19

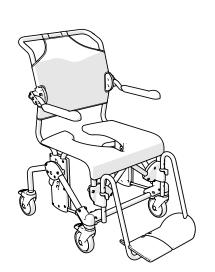

Swift Mobil-2

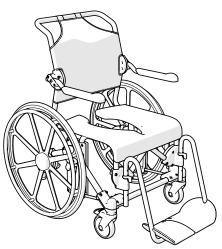

Swift Mobil 24"-2

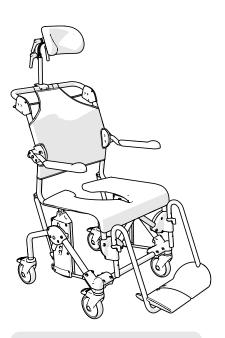

Swift Mobil Tilt-2


Swift Mobil-2 XL




Contents

mages	3-11
General	18
Product description	18
Assembly	18
Dimension table	
Warranty / maintenance	
Safety	18
Transfers	
Adjustment	
_egrest	
Γilt function	
Accessories	

Δ

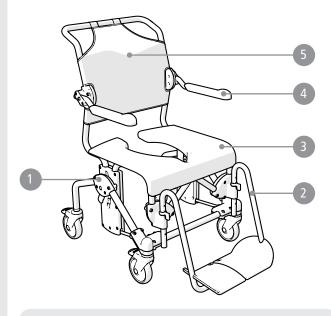


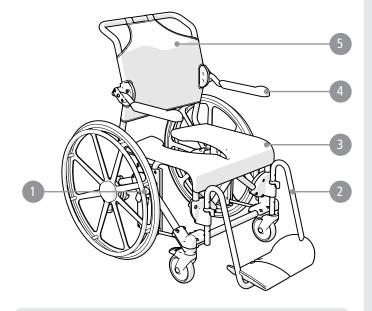


Swift Mobil-2

Swift Mobil 24"-2


Swift Mobil-2 XL

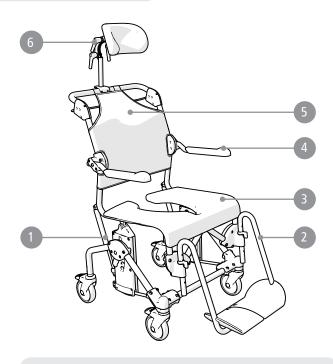


Swift Mobil Tilt-2

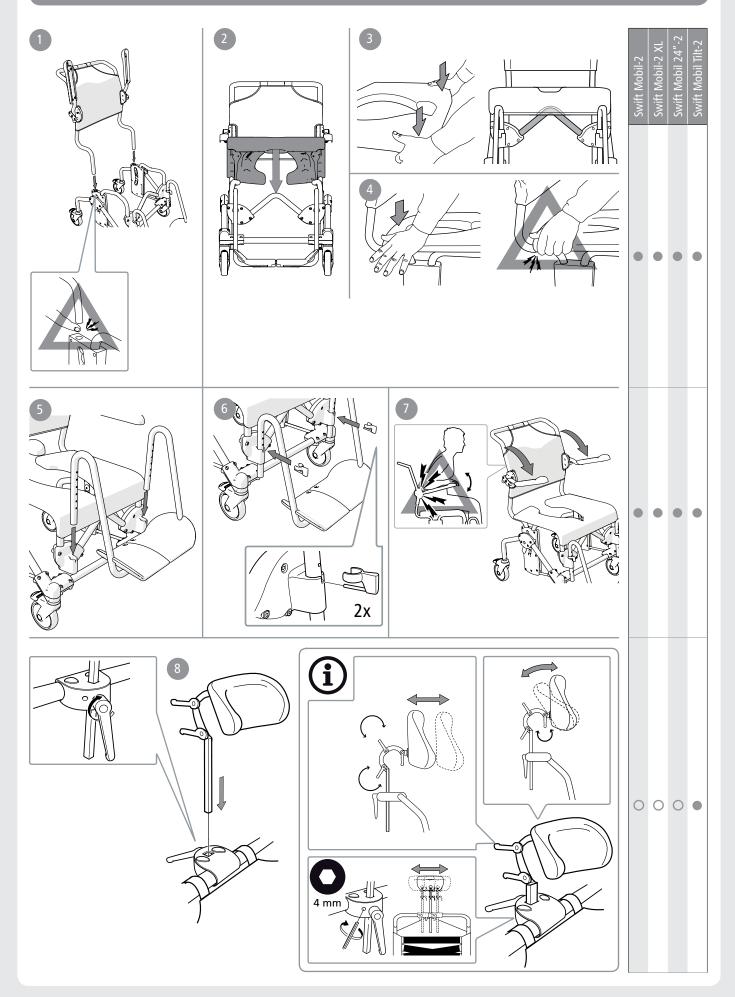

C

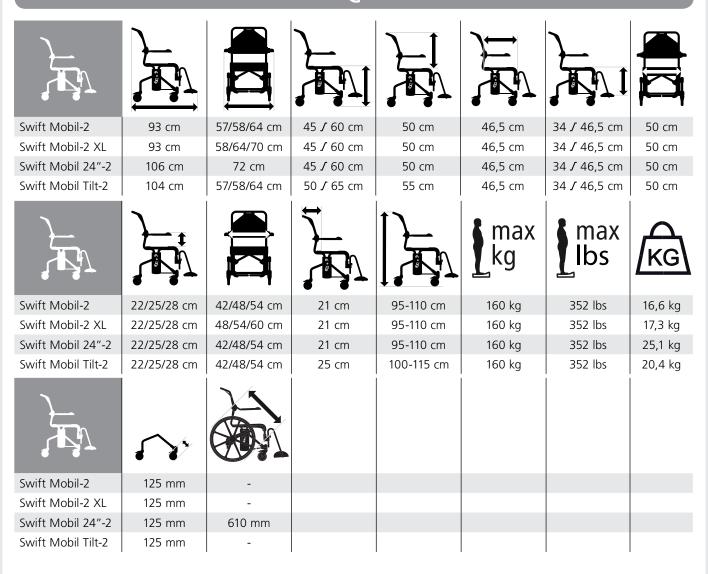

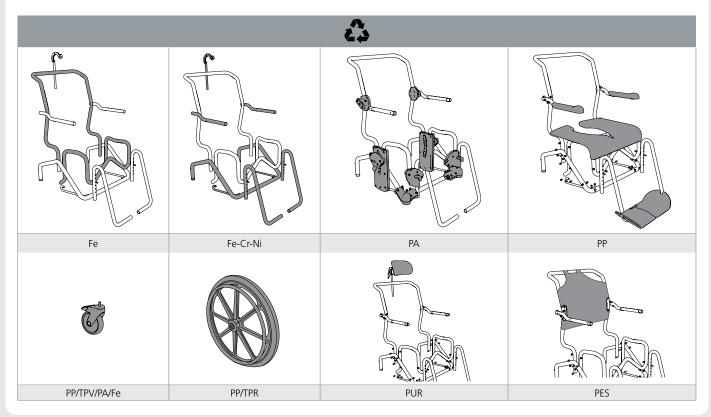

D









l

















6









E








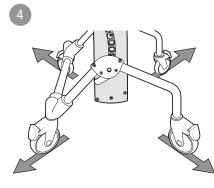

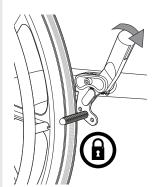




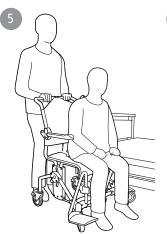









G

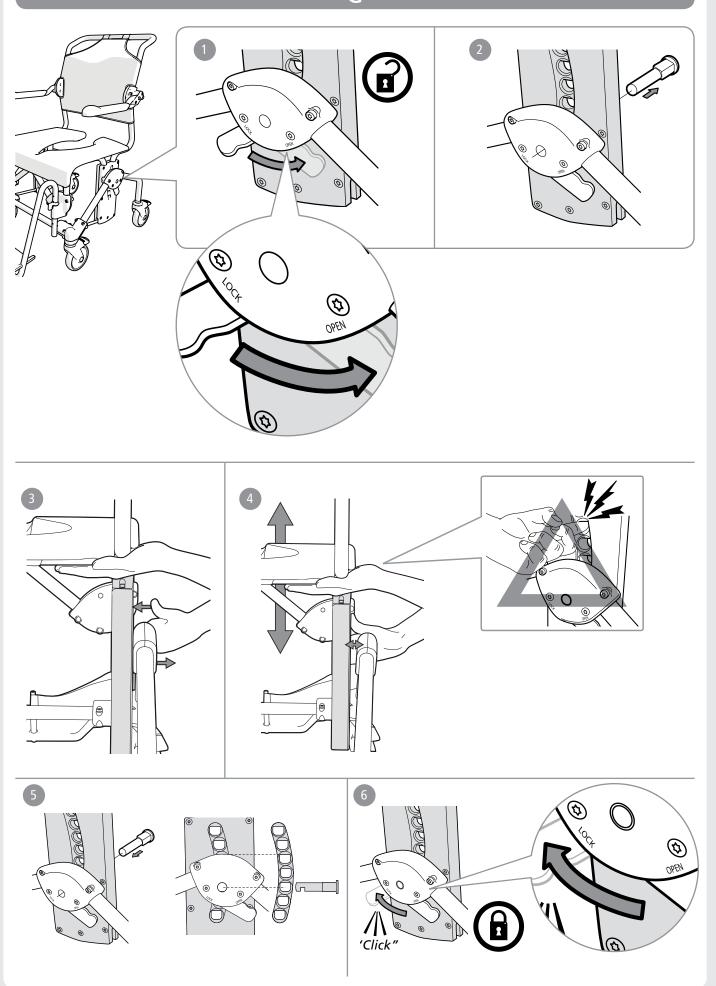

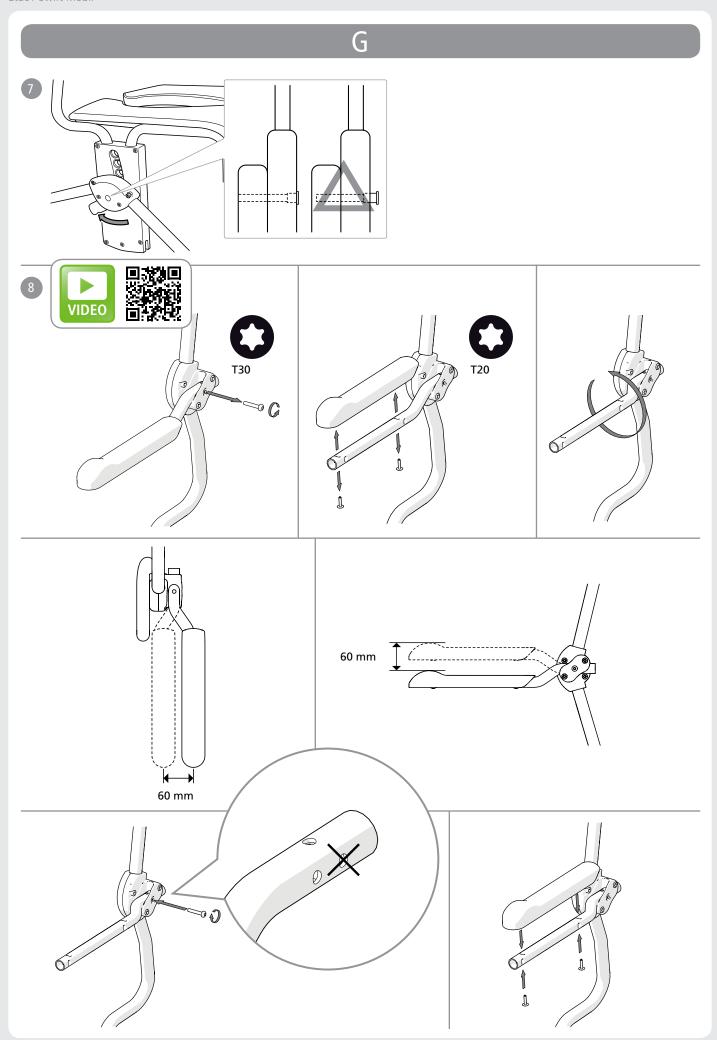


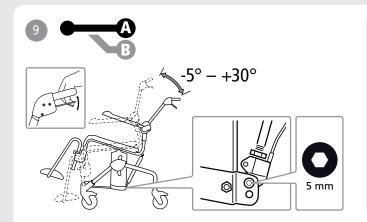

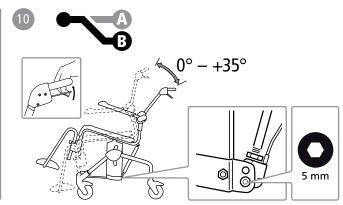

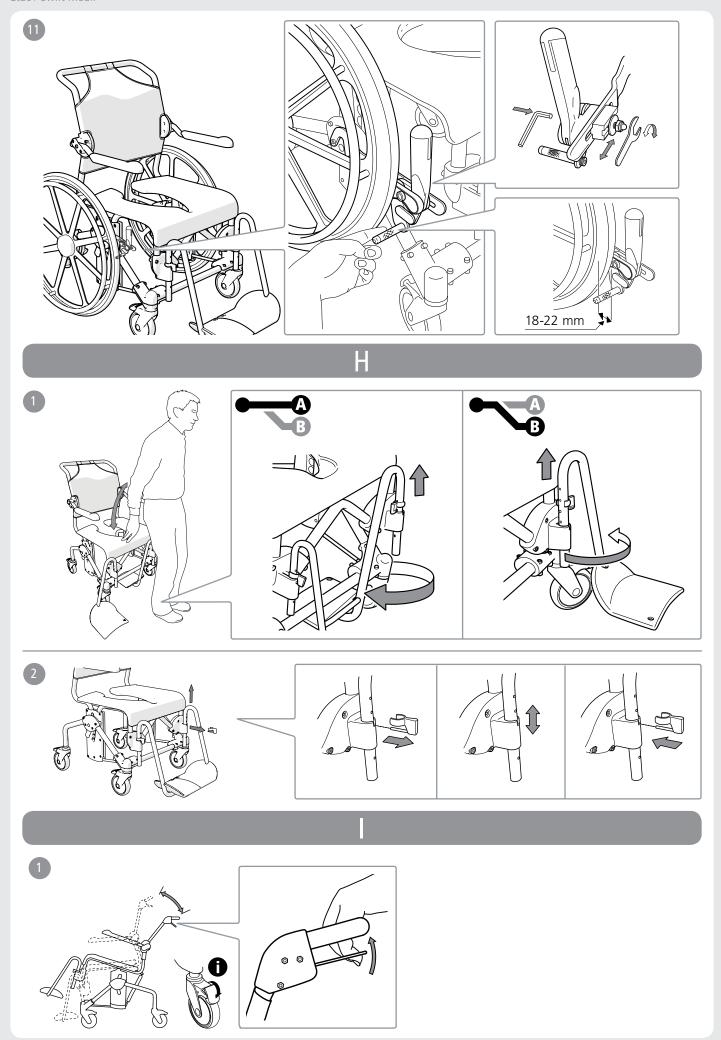

Ш

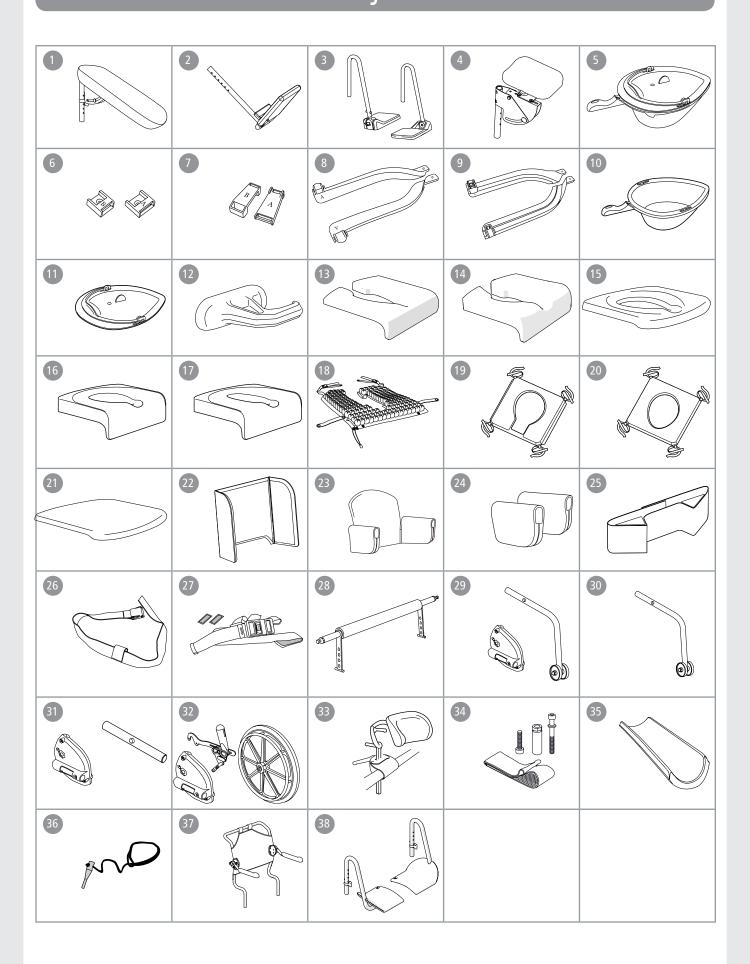

English

General

Thank you for choosing an Etac product.

In order to avoid injury during handling and use, please read through this manual first.

In the manual, the user is the person sitting in the chair. The assistant is the person operating the chair.

Intended use:

The Swift Mobil-2 family is a range of mobile shower and toilet chairs intended for use when carrying out hygiene care for people with decreased mobility. The shower chair can be used in showers, at sinks or over the toilet, as well as for transfers to and from the hygiene room.

Contra indications: Clinical experience shows that there are no harmful effects of using Swift Mobil-2.

Swift Mobil-2 has been tested by a testing institute and complies with the requirements stated in EN ISO 10993-1 and SS EN 12182.



This symbol appears in the manual along with text. It indicates instances where the safety of the user or the assistant may be at risk.



The images which are referred to on each page are found at the start of the manual (pages 3 to 11). See Figures A to J for the corresponding text.



This product should be recycled as per national regulations.

Item list: ■ = Applies to, ○ = Accessories

See the item list on the right which displays the information applicable to each product.

Product description

See Figure A

00

A1. Bolt, A2. Leg support, A3. Seat, A4. Arm support, A5. Back support upholstery

A6. Head support

Assembly

,

See Figure *B*

Dimension table See Figure

Warranty / maintenance

See Figure *D*

5-year guarantee against material and manufacturing defects. For terms and conditions.

Service life 7 years. For complete information regarding the service life of the product.

D1. Clean the product with normal non-abrasive cleaning agents (pH value of between 5-9). Rinse and dry. Disinfect the product with an alcohol-based disinfectant, 70%.

The product is otherwise maintenance-free.

D2. The product and its accessories can be safely cleaned at 85°C for 3 minutes (unless otherwise stated). This applies for reconditioning.

The product can be reconditioned. Refer to the reconditioning instructions.

Constituent materials are resistant to common disinfectants.

Methods of surface treatment:

Lacquered surfaces = Polyester powder coating Non-lacquered steel surfaces = Fe/Zn-Ni

▲ Safety

See Figure *E*



Defective chairs must not be used.

- **E1.** Make sure the castors are locked when users sit down on or get up from the chair.
- An anti-tip attachment must be used if the user is an amputee.
- **E2.** Never stand on the foot supports as there is a risk of tipping!
- E3. The sitting position has an impact on stability.
- **E4.** Chair stability is improved if the castors point outward.
- **E5.** See the maximum user weight for your commode chair in the table (page 5).
- **E6.** Risk of crushing with arm supports.
- E7. Do not use defective products.

Transfers

Over a threshold:

- **F1.** Chair only, put one foot on the wheel.
- **F2.** With user, pull the chair backwards.

In stationary position:

- **F3.** Always lock as many castors as possible when the chair is to be used in a stationary position.
- F4. Out-turned castors improve the chair's stability.

Transferring:

Assess the risks and take notes. You as a carer are responsible for the safety of the user. Aids should be used if the transfer is deemed as risky.

- **F3-F4.** It is important to ensure that the castors are locked and pointing outward before carrying out transfers to and from Swift Mobil-2.
- **F5-F7.** Fold up the arm support on the transfer side of the chair. Carry out the transfer.

English

Eligiisii					obil-2	obil-2	pbil 24	il Ti	
Λο	livetmont			_	Con Figure C	Swift Mobil-2	Swift Mobil-2	Swift Mobil 24	wift Mo
AC	ljustment				See Figure <i>G</i>	5	\ <u>\</u>	S	5
Heig G1-C	ght 57. The height is easily adjusted by inserting the the required position. See distances in the ted data section.		<u>^</u>	heig	k that both sides have been adjusted to the same ht as otherwise stability can be reduced. G7 . Do use the chair if the bolt (orange) is not locked.	•	•	•	•
G8.	n supports The height of the arm supports and/or width be support to the desired position and retighten th position.					•	•	•	•
G9.	angle Fit the gas piston in position A to tilt the seat at . Fit the gas piston in position B to tilt the seat a								•
	r <mark>brake</mark> . When adjusting the brake, the brake pin shoul	d be set 18 t	o 22 n	nm froi	m the rear wheel for good grip.	0	0		
Le	g support				See Figure <i>H</i>		•		•
H1.	The assistant can easily raise and swivel the leg so the side for the user to sit down in or get up the chair. The foot supports are detachable.		ing		eight adjustment options are available by mov- cking pin. The leg supports have 6 different ttings.				
Til	t function				See Figure <i>I</i>				•
11. T	he assistant can adjust the sitting angle with ea Make sure that the wheels are locked if the tilt f	se by holding unction is use	in the	e handl en the	e and tilting to the required position. user is sitting in the chair.				
Ac	cessories				See Figure <i>J</i>				
	ne section "Accessories", you can see all accesso	ary ontions a	المجاند	n for vo					
	kets. There are restrictions on accessory combin								
		(L)2	-2				اپا	2	-
See	e Figure <i>J</i>	Sw M2 Sw M2 X	Sw M. Tilt-2	See Fi	gure <i>J</i>	Sw M2	Sw M2 XI	Sw M. 24"-2	Sw M Tilt-2
J1.	Leg and calf rest, angle-variable	000	0	J21.	Seat cover	0	0	0	С
J2.	Footrest	000	0	J22.	Soft back pad	0	0	0	С
J3.	Angle adj. footrest	000	0	J23.	Comfort padding	0		0	C
J4.	Amputee legrest	000	0	J24.	Armrest cushion, pair	0	0	0	С
J5.	Commode pan	000	0	J25.	Trunk support	0	0	0	С
J6.	Pan-holder attachments	000	0	J26.	Chest belt	0	0	0	С
J7.	Attachments for low pan-holder mounting	000	0	J26.	Positioning belt	0	0	0	С
J8.	Commode pan holders	000	0	J27.	Crossbar 605 mm	0		0	С
J9.	Bucket holders	000	0	J28.	Crossbar 665 mm	0	0	0	С
J10.		000	0		Anti-tip stabilisers including bracket	0	0	0	С
J11.	Lid with handle	000	0	J30.	Anti-tip stabilisers excluding bracket	0	0	0	C
	Splash guard	000	0	J31.	Tilter	0	0	0	C
	Soft Comfort seat, 2 cm high, open at back	000	0		Rear wheel kit	0	0		
	Soft Comfort seat, 4 cm high, open at back	000	0		Headrest and bracket	0	0	0	•
	Comfort seat	0 0 0			Heel straps	0	0	0	-
	Soft Comfort seat		0		Hemiplegic armrest	0	0	0	_
	Soft Comfort seat - narrow opening	000			Armrest lock	0	0	0	С
	ROHO pressure-relieving cushion	0 0 0			Extended back support	0	0	0	-
J19.	Soft cushion - standard opening	0 0 0	0	J38.	Short leg support	0	0	0	C

0000

J20. Soft cushion - oval opening