

IMPORTANT INFORMATION

- ▲ Rated load is 700 pounds, 350 pounds per caster or wheel. **Never exceed rated load.**
- ▲ Read and follow all labels, instructions, safety and maintenance information before use.

- ▲ Do not use if ramp is damaged or unstable.
- ▲ For wheelchairs and scooters only (not intended for commercial use).
- ▲ Ramp may be slippery when wet or icy.
- ▲ Use only if sufficient maneuvering room is available at both ends of the ramp to assure safe travel when entering and exiting the ramp.
- ▲ Use ramp only with a qualified helper and always use your lap belt.
- ▲ It is important that you refer to your equipment's (wheelchair or scooter) User Guide for the proper degree of incline or decline and chair direction before attempting ramp use. **Never exceed its recommendations.**

GETTING STARTED

1. Ramp is shipped fully assembled.
2. Use the chart below to view the different rise ranges:

Size	Maximum Rise
8-IN	1-5/16"
10-IN	1-5/8"
12-IN	2"

FASTENING PLATE TO LANDING OR THRESHOLD

- ▲ The Transitions Angled Entry Plate must be fastened to the landing or threshold before use.
 - ✎ Use the two pre-drilled holes in the top of the ramp to fasten to the landing or threshold. Wood screws, sheet metal screws, or concrete bolts may be necessary, depending on the application.
1. ATTACHING TO WOOD
 - 1.1 Fasten the Angled Entry Plate by installing one 1/4" x 1" self-drilling stainless steel screw (supplied) through each hole as shown.
 2. ATTACHING TO CONCRETE
 - 2.1 Use the two pre-drilled holes in the top of the Transitions Angled Entry Plate as a template to mark the positions to drill.
 - 2.2 Using a 1/4" masonry bit, drill two holes at the marked locations. Drill to a depth specified by the pin drive anchor manufacturer's instructions.
 - 2.3 After drilling, make sure that the holes are free of any residue and/or debris.
 - 2.4 Align the Transitions Angled Entry Plate over the drilled holes.
 - 2.5 Install 1/4" x 1 1/2" pin drive concrete anchors (not supplied) into the holes per the pin drive anchor manufacturer's instructions.

SAFETY & MAINTENANCE

1. Regularly check ramp for damage and tighten any loose fasteners.
2. Keep ramp surface clear of ice, snow, dirt, leaves, and other debris. For snow or ice, remove accumulation and sweep surface clean. To remove dirt, leaves, and other debris, sweeping the surface or using a garden hose will usually suffice. If needed, use a damp cloth or soft brush with non-alkaloid detergent and water. Rinse well and use extra caution if ramp surface is wet.

