

Legacy Seat Harness

SEAT HARNESS

Features:

- Position the harness under the buttocks, with the front straps/buckles between the legs
- The long adjustable front straps go over the thighs
- Metal clips and cam lock buckles attach the harness to the chair


Description	Part Number	Padded Area Dimensions		
		Suggested Chair Width	Length	Width (buckle end)
Small	30516	11"-13"	16"	10"
Medium	30517	14"-16"	17"	12"
Large	30518	17"-19"	18"	13"



A seat harness is not a safety device. It is to be used only for positioning.



All Back straps on this page are 9" long, without attaching hardware.

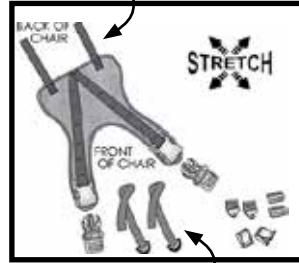


All Front straps on this page are 24" long, without attaching hardware.

STATIC SEAT HARNESS

Features:

- Designed with static material to maintain neutral pelvis for those with high extensor tone
- Helps control posterior pelvis rotation and anterior thrusting
- Available in rear pull or front pull configurations

Description	Part Number	Part Number
	Front Pull	Rear Pull
Small	50726	50729
Medium	50727	50730
Large	50728	50731

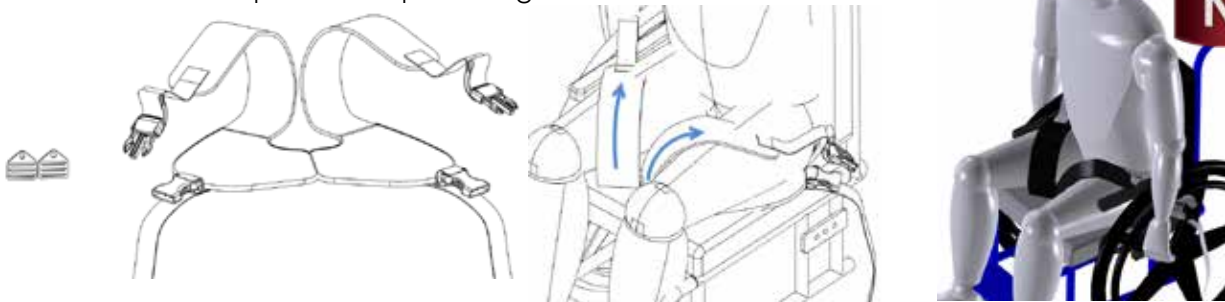

SOFT GOODS ATTACHING HARDWARE

METAL ATTACHING CLIP

ATTACH 1" OR 1.5" STRAP TO CHAIR




ATTACH 2" STRAP TO CHAIR



CAM LOCK BUCKLE

ATTACH STRAP TO CHAIR

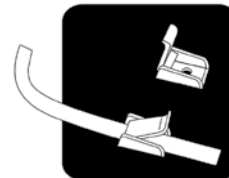

3-BAR SLIDING CLIP

LOOP STRAP AROUND FRAME



USE WITH METAL ATTACHING CLIP



FINGER LOOP STRAP

PULL FINGER LOOP TO TIGHTEN

