



VOX 6030

Workstations, desks, and tables with powered adjustment

PARTS INCLUDED:

LEG PACKAGE:

- A** (2) Telescoping Legs
- B** (2) Feet
- C** (2) Support Brace
- D** (1) Controller
- E** (1) Control Switch
- (1) Hardware bag








TABLE PACKAGE:

- H** (1) Table Top

TOOLS NEEDED:

- Phillips Screwdriver


HARDWARE BAG WITH:

H (8) M8 Fastener		L (6) #8 x 3/4" Fasteners	
I (8) M6 Fasteners		M (16) Clamps	
J (8) #10 x 1" Fasteners		N (4) Levelers (Or Optional Casters)	
K (16) #6 x 1/2" Fasteners			




STEP 1: PREPARATION

Unpack and identify all parts. Place Table Top (G) upside down on padded surface and identify front edge.

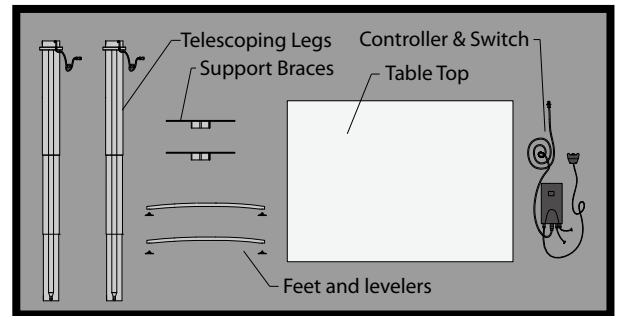


STEP 2: SUPPORT BRACE ATTACHMENT TO TELESCOPING LEG

Position Support Brace (C) over Telescoping Leg (A) as shown. Align the slot in the Support Brace (C) with the cable exit and securely attach cable in cable cradle. Secure Support Brace (C) to Telescoping Leg (A) with four M6 Fasteners (I).

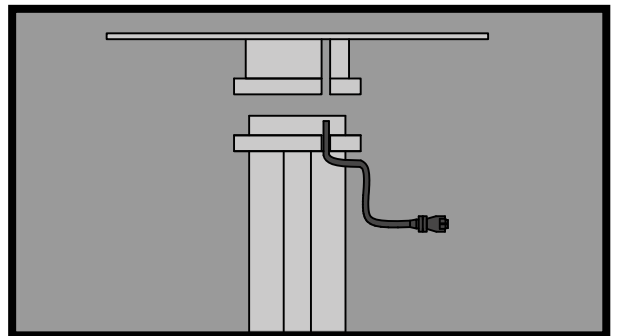


STEP 3: SUPPORT BRACE AND CONTROLLER ATTACHMENT TO TABLETOP

Position Support Brace (C) as shown with the cables facing inward. Align with pre-drilled holes and attach Support Brace (C) to Table Top (G) with four #10 x 1" Fasteners (J). Position Controller (D) and Control Switch (E) as shown on Table Top (G). Align with pre-drilled holes and attach Control Switch (C) to table top as shown using four # 8 x 3/4" Fasteners (L). Plug motor wire into Controller (D) and secure cables to Table Top (G) with Clamps (M) and #6 x 1/2" Fasteners (K). Plug each cable from the Telescoping Legs (A) into the M1 and M2 slots. Plug the Control Switch (E) into HS slot.

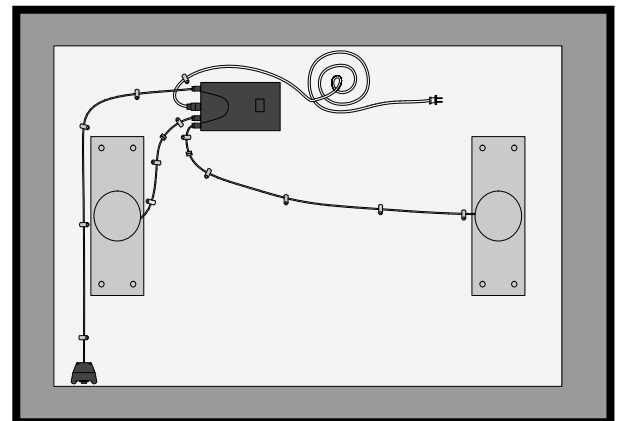

STEP 4: FEET ATTACHMENT

Position Feet (B) over the bottom of Telescoping Leg (A) and align mounting holes. Attach using four M8 Fasteners (H) but do not completely tighten. The mounting plate on the Telescoping Leg (A) will swivel allowing the foot to be aligned properly. Securely holding the foot in the proper alignment with the Table Top (A), fully tighten the fasteners. Attach four Levelers (N) or optional casters.

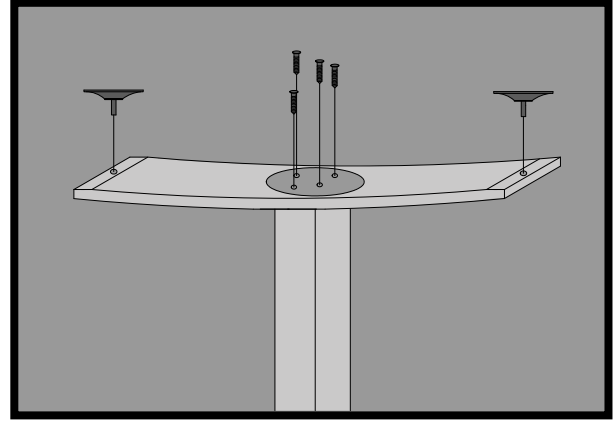

STEP 5: OPERATION AND USE

Gently turn table over and adjust Levelers (N) if required. Table adjusts up and down using the Control Switch (E). Clean with soft cloth and mild cleaners suitable for furniture.